


RING SIZE *Guide*

DIAMOND & PLATINUM RING SIZES

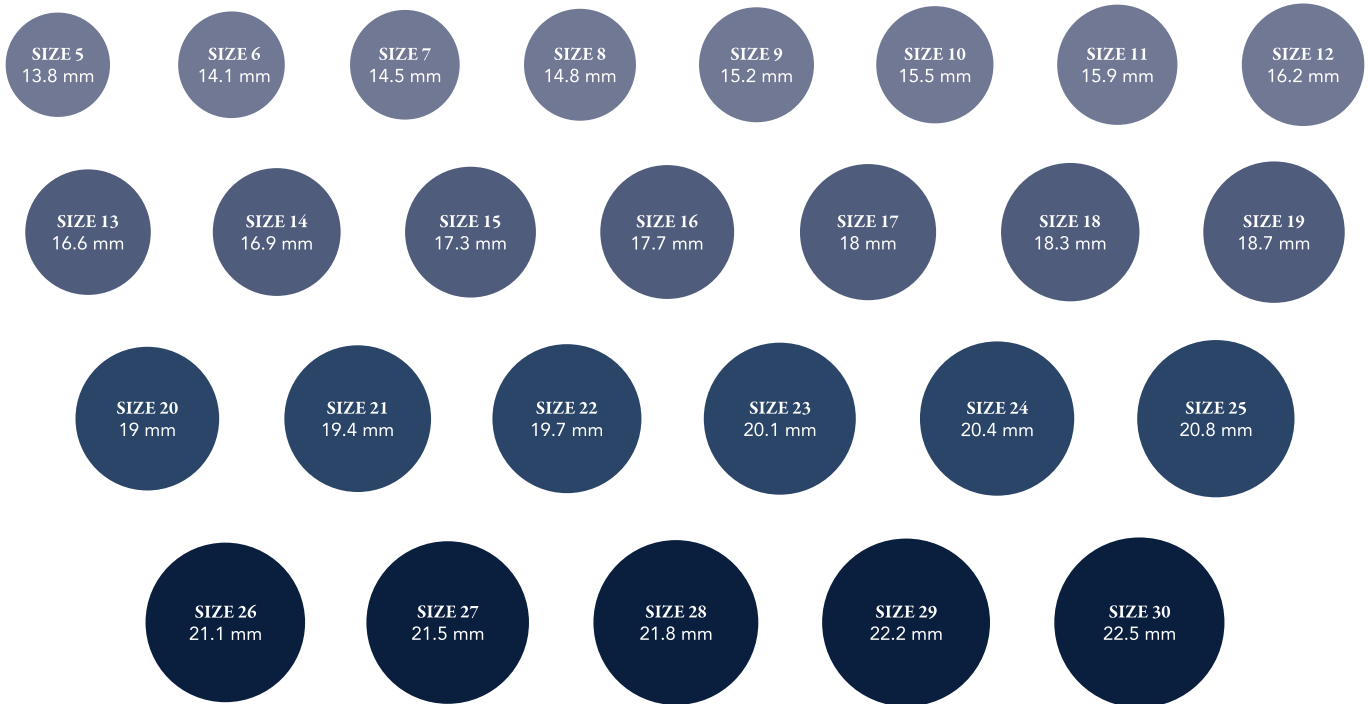

MEASURE AN EXISTING RING

STEP 1. Print this page. Ensure that page scaling is set to none in the print dialog box.

STEP 2. Make sure the bar measures exactly 30mm.



STEP 3. Select a ring that properly fits the intended finger.

STEP 4. Place the ring over the circles below, lining up the inside edge of the ring with the circle nearest in size. This measurement refers to the inside diameter of the ring.

STEP 5. If your size is between two sizes, opt for the larger of the two.

RING SIZE *Guide*

CIRCUMFERENCE	DIAMETER	HK SIZE (DIAMOND & PLATINUM)	UNITED STATES & CANADA
43.3	13.8	5	2.75
44.3	14.1	6	3
45.5	14.5	7	3.5
46.5	14.8	8	3.75
47.7	15.2	9	4.25
48.7	15.5	10	4.75
49.9	15.9	11	5.25
50.9	16.2	12	5.5
52.1	16.6	13	6
53.1	16.9	14	6.5
54.3	17.3	15	7
55.6	17.7	16	7.5
56.5	18.0	17	7.75
57.5	18.3	18	8.25
58.7	18.7	19	8.75
59.7	19.0	20	9
60.9	19.4	21	9.5
61.9	19.7	22	10
63.1	20.1	23	10.25
64.1	20.4	24	10.75
65.3	20.8	25	11.25
66.3	21.1	26	11.5
67.5	21.5	27	12
68.5	21.8	28	12.5
69.7	22.2	29	12.75
70.7	22.5	30	13.25

Note that Diamond & Platinum uses Hong Kong sizes.